

va-Q-multipack

Product Data Sheet

General information

- High performance single-use shipper with a big volume
- Modular setup in 4 standard box sizes
- 4 functional layers: Outer carton, polystyrene box, vacuum insulation panels, inner carton
- Specific heat flow through the va-Q-multipack: Q-value 0.29 W/K



Dimensions and weight

- va-Q-multipack M
 - Article No.: BC000030
 - Outside: 600 mm x 400 mm x 345 mm (h)
 - Inside: 465 mm x 265 mm x 195 mm (h)
 - Weight (Empty box): 3.6 kg
- va-Q-multipack L (flat)
 - Article No.: BC000056
 - Outside: 600 mm x 600 mm x 330 mm (h)
 - Inside: 450 mm x 450 mm x 220 mm (h)
 - Weight (Empty box): 6.0 kg
- va-Q-multipack L (high)
 - Article No.: BC000032
 - Outside: 600 mm x 400 mm x 540 mm (h)
 - Inside: 465 mm x 265 mm x 400 mm (h)
 - Weight (Empty box): 5.4 kg
- va-Q-multipack XL
 - Article No.: BC000044
 - Outside: 600 mm x 600 mm x 580 mm (h)
 - Inside: 450 mm x 450 mm x 450 mm (h)
 - Weight (Empty box): 9.5 kg

Options


- Other sizes available upon request
- va-Q-accus on demand for different temperature ranges

Application

- Reliable long distance transport of temperature sensitive goods: Medicine, pharmacy, biotechnology, etc

Performance example

- Outside temperature range: +20 °C ... +40 °C
- Inside temperature range: +2 °C ... +8 °C
- Contents: 24 pcs va-Q-accus 10L+04G chilled
- Performance: more than 3.5 days autonomy within +2 °C ... +8 °C range

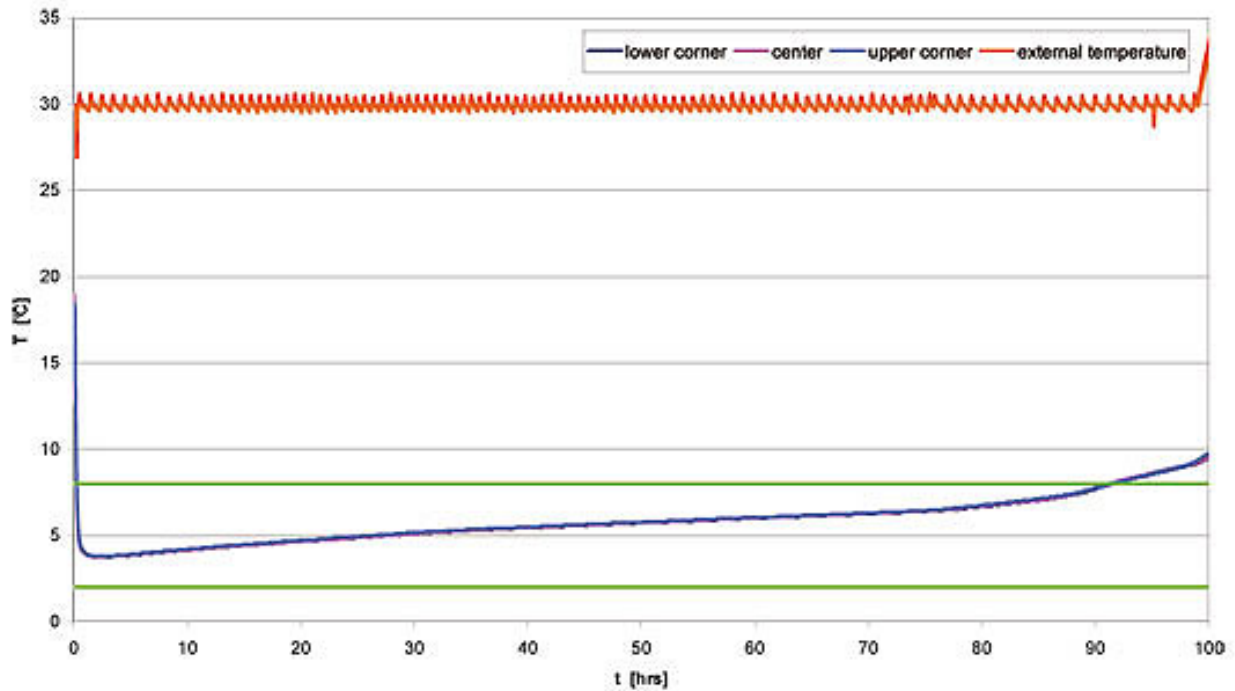

M (21 liter), L High (43 liter), L Flat (45 liter), XL (91 liter) (from left to right)